### SPK ELECTRONICS CO., LTD.

### **Engineering Specification**

工程規格書

Customer	: 1526
Custonici	. 1540

客戶代號

Product : Touch Panel (Non Glare)

產品名稱 :觸控面板(霧面)

Model : TR5-190F-01N (83F4-4180-J001A)

型號

Type : Five-Wire Analog Resistive Series

類型 : 五線式類比電阻式

Version : E/S C01

版次

Date : Jan-24-2007

日期

Customer	Approval

客戶承認欄

Date of Signature 承認日期:\_\_\_\_\_

Conform to HSF

Approved	Reviewed	Prepared
核准	核對	製作
陳民偉	<u>陳莉桂</u>	陳怡蓉

Add: 10F,NO.510,SEC.5,CHUNG HSIAO E. RD, TAIPEI, TAIWAN

Tel: 02-2346-2323 Fax: 02-2346-3939 E-mail: <u>spktw@ms34.hinet.net</u> WEB:http://www.spkecl.com

# SPK ELECTRONICS CO., LTD.

Revision Date	Page	Content
變更日期		內容
Jan-24-2007		First draft 第一版
		• 1
		dential
	1	delitia
- (1)		
00-		
	變更日期 Jan-24-2007	變更日期 頁碼 Jan-24-2007

# SPK ELECTRONICS CO., LTD.

#### TABLE OF CONTENTS

### 目錄

	Page
	頁碼
1. FEATURES	4
特性說明	
2. DIMENSIONS & ENGINEERING DRAWING	4
產品尺寸和工程圖	•
3. ENVIRONMENTAL CHARACTERISTICS	. 5
環境特性	
4. OPTICAL CHARACTERISTICS	. 5
光學特性	
5. ELECTRICAL CHARACTERISITCS	. 5
電氣特性	
6. MECHANICAL CHARACTERISTICS	. 6
機械特性	
7. RELIABILITY	6
信賴性特性	
8. DURABILITY	7
耐久性特性.	
9. LINEARITY INSPECTION METHOD	,
線性測試方式	
10. APPEARANCE INSPECTIONS	. 8
外觀檢驗說明	
11. INSTALLATION GUIDE	9
組裝注意事項	
12. WARRANTY	10
產品保固	
13. CAUTIONS	11
注意事項	
14. APPEARANCE SPECIFICATIONS	
外觀檢驗規範	
15. DURABILITY TEST METHOD	-
耐久測試方式	
16. CAUTIONS FOR PRODUCT HANDLING	14
拿取注意事項	
17. PACKING METHOD	· 15
包裝方式	

#### 1. FEATURES

#### 特性

Type 類型	Five-Wire Analog Resistive Touch Panel 五線式類比電阻式 <b>(RoHS)</b>		
	Material 材質	Thickness 厚度	Type 類型
Structure 構造	ITO/PET	188um	Non-Glare 霧面
	ITO/GLASS	1.8mm	Normal 普通
Input Mode 輸入方式	Stylus or Finger 觸控筆或手指		
Connector 連接	FPC 軟排線		


#### 2. DIMENSIONS

Item 項目

產品尺寸

	Specification (unit: mm )單位:mm				
(1)	Frame Size 外尺寸	404.11±0.76x329.95±0.76			
(2)	View Area 可視區	382.79±0.76x307.35±0.76			
(3)	Active Area 動作區	378.97±0.76x303.53±0.76			
(4)	Total Thickness 總厚度	2.05±0.20			
(5)	Tail Length 排線長度	190.00 <u>±</u> 1.00			

[Engineering Drawing] 工程圖

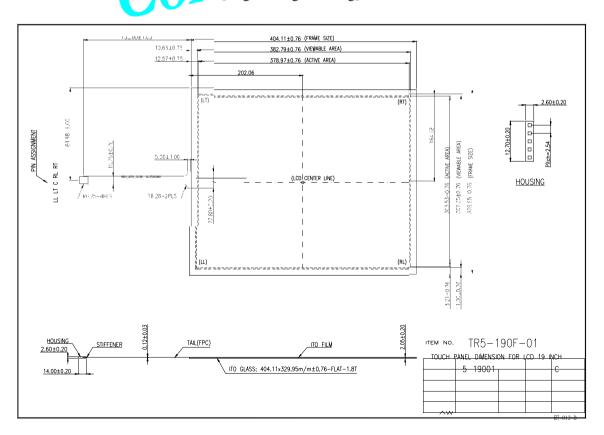

### 3. ENVIRONMENTAL CHARACTERISTICS

環境特性

	Status 狀態	Temperature 溫度
(1)	Operation 操作溫度	-10~60°C
(2)	Storage 儲存溫度	-40~75°C

Note: The environment is of normal atmosphere pressure.

註:在正常氣壓的環境

### 4. OPTICAL CHARACTERISTICS

光學特性

Item	Specification
項目	規格
(1) Transparency 透光度	82±5%

Note1: Transparency is measured by using BYK-Gardner instrument.

Note2: Test method-satisfy (2) of item 10 on Page 8.

註:透光度用BYK-Gardner 儀器量測。附合第8 頁,10-2 規範

### 5. ELECTRICAL CHARACTERISTICS

電氣特性

	Item 項目	Specification 規格
(1)	Operation Voltage 操作電壓	5VDC ≤1.5%
(2)	Linearity Tolerance 線性誤差	(Test method reference item 9 on Page 7) (測試方式參看第 7 頁第 9 項)
(3)	Chattering 反應時間	≦10ms
(4)	Insulation 絶緣阻抗	$\geq$ 2M $\Omega$ , 25VDC
(5)	Endurance 耐壓測試	No arcing damage at 25VDC, 60sec.
(6)	Operative Resistance 操作阻抗	$\leq 2K\Omega$

# 6. MECHANICAL CHARACTERISTICS

Ite <mark>新</mark> 械特性 項目		Condition 條件	Specification 規格
(1)	Activation Force 作動力	Stylus R0.8	Avg: 5~50g
(2)	Impact 落球測試	Φ 22.0mm Steel Ball,45g, Height=30cm	1 time, no damage (Impact at center area)
(3)	Static Load 靜置荷重	15kg at Ф20mm area for 30sec	No damage
(4)	Hardness 表面硬度	3H pencil, pressure 1n, 45 °(JIS K5400)	≥3H
(5)	Tail Peeling 排線拉力強度	300g/cm by 90 degree	Satisfy (2) of item 5
(6)	Tail Bending 排線繞折強度	10 times by radius R:1mm 500g left & right 135 <mark>de</mark> gree	Satisfy (2) of item 5

### 7. RELIABILITY

信賴性特性

_			MIII	
	1	Titem 項目	Condition 條件	Specification 規格
	(1)	Constant Temperature and Humidity 恆溫恆濕 測試	60℃, 90%RH, 240 hrs and normalized for 4 hrs 溫度60℃濕度90%,240 小時回 常溫4 小時後測試	After the reliability test, the PET layer may have same change of
	(2)	Heat Cycle 高溫測試	75℃, 240 hrs and normalized for 4 hrs 溫度75℃, 240 小時回常溫4 小 時後測試	appearcmce; but the electrical characteristics still satisfy (1)of item 4;
(	3)	Cold Cycle 低溫測試	-40°C, 240 hrs and normalized for 4 hrs 溫度-40°C, 240 小時回常溫4 小	經信賴性測試後, 上層
	(4)	Thermal Cycle 冷熱循環	時後測試 -40~75℃, 0.5hr each, 50 cycles and normalized for 4 hrs 溫度-40 到75℃, 各30 分鐘, 共50 個循環, 回常溫4 小時後涯	的變化,但電氣功能仍符合第4項的(1)和第 5項的(2)、(4)。

#### 8. DURABILITY

耐久性特性

# 9. LINEARITY INSPECTION METHOD

線性測試方式


Item	Condition	Specification
項目	條件	規格
Finger Touch (1) 打點測試	35Million times, (Please refer to page 13)	Satisfy(2),(4) of item 5;

Voltage (DC 5V) is applied to RT+RL or LL+RL and ground (0V) is applied to LT+LL or LT+RT.

Using stylus to draw straight points (LX and LY) at 12.5 mm intervals within pattern area and detect the voltage at SG to Measure the voltage differences between RT+RL and LT+LL or RL+LL and LT+RT.

電壓 5VDC 接到 RT+RL 或 LL-RL,0V 接到 LT+LL 或 LT+RT 使用塑膠


筆在動作區內劃間隔 12.5mm 的 LX 和 LY 的線條。量測 RT+RL 和 LT+LL 或 RL+LL 和 LT+RT.之間的電壓。

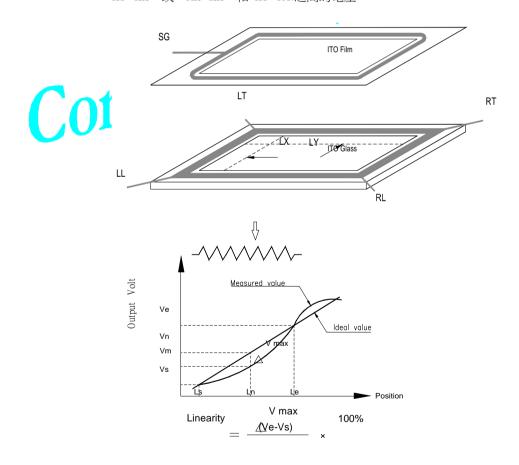

## 10. APPEARANCE INSPECTIONS

外觀檢驗說明

- (1) The flaws and impurities are allowed outside viewing area except for those affecting electrical functions.
  - 不影響產品電氣功能的情況下可視區之外允許有裂傷和髒污.
- (2) The inspection shall be performed by using one 1200±200LUX fluorescent lamp as back or side light. The panel shall be placed at 30cm away from eyes as shown below.
  - 使用1200±200LUX亮度的日光燈和觸控面板放在距眼睛30公分做檢驗.

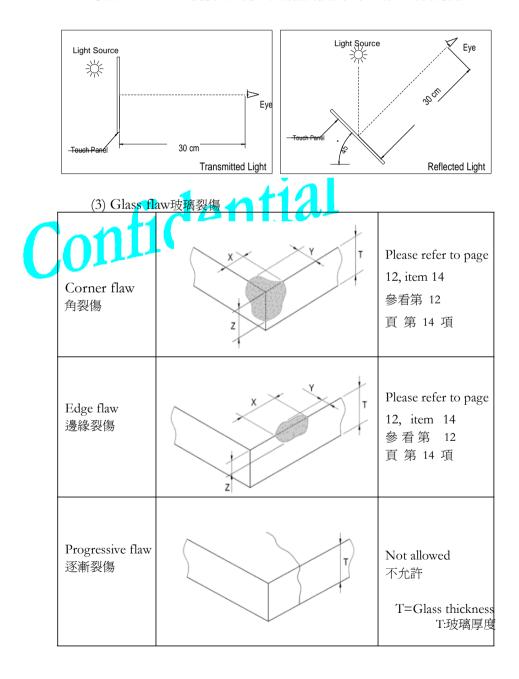

### 11. INSTALLATION GUIDE

組裝注意事項


- (1) Front Bezel Opening must be located between View Area and Active Area.
  - 外殼的開口要設計在可視區和動作區之間。
- (2) Elastic materials are recommended as supports to fix the Touch Panel. 建議使用彈性材質來固定觸控面板。
- (3) Support materials must be designed out of the Silver Bar. 將背膠或泡棉材質的設計不可超過銀線的內側。
- (4) Front Bezel Opening must be designed with enough gap to the Touch Panel surface in any conditions. 無論在靜態或外殼有施力的情況下,外殼和觸控面板表面之間要有足夠的空隙。
- (5) After mounting, avoid direct metal contact with edges of the Touch Panel.
  組裝之後不可用金屬物碰觸到觸控面板的外側邊緣。
- \*(6) The area between the View Area and Active Area is Anti-input Area and also Weak Area. It is absolutely forbidden to draw lines along the edge of the Bezel Opening in the Weak Area because it will cause ITO layer to damage and failure of the Touch Panel.


觸控面板的可視區和動作區之間的區域爲禁止輸入區,也就是脆弱區。嚴禁在此區內邊緣劃線,如此會造成薄膜的 ITO 層被破壞而觸控面板喪失功能。

(7) If the applications of customer need to draw lines along the edges, please contact SPK's engineer to discuss the design of the Front Bezel.

若客戶的使用需要在邊緣畫線, 請連絡SPK 工程師討論外殼的機構 設計。

\*(8) This installation guide is only for customer reference. 此組裝方式僅供客戶參考。

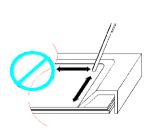

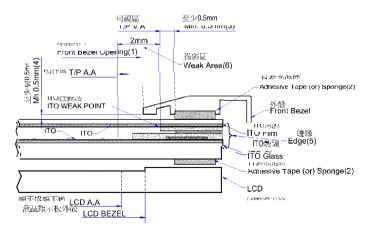

\*Note: Please take attention seriously on items 6, 7 and 8.

\*注意: 請特別注意第 6、7 和 8 項。

#### 12. WARRANTY

With the exceptions listed below, all SPK's products are guaranteed free of manufacturing defects for a period of up to two years. All defected products will be repaired or exchanged free of charge if determined to be the responsibility of SPK. SPK reserves the sole discretion in determining the causes and the responsibilities of any defects or damages. For details, please refer to SPK's "Product Warrant Policy".

產品保固

本產品除了以下例外條件之外其保固時間爲二年, 凡屬本公司責任之出廠不 良,會提供免費維修或換新品服務。細節請參看"產品保固條例"。

List of Exceptions: 例外條件:

- Damages caused by improper handling of clients, including and not limited to, during shipping or manufacturing processes.
   客戶操作不當(含製程和運送)造成的損傷。
- 2. Damages caused by disasters, either by natural causes or human factors, after the delivery of products.
  出貨後天災(或)不可抗拒的因素(或)其他人爲因素造成的損傷。
- 3. Any repairs, modifications or disassembling of SPK's products without prior notification to and the consent of SPK. 未經本公司同意,客戶自行拆卸、維修和更改造成的損傷.

#### 13. CAUTIONS

注意事項

C	(1) Store packaged products at the temperature and humidity mentioned in the	
Storage	(1) Store packaged products at the temperature and humidity mentioned in the specification with care. Do not expose products to direct sunlight or stress such	
儲存		
	as that caused by piling. 主收多只读方式相签测序和调序理控 加收多只方位嘎嘎大阻火下式铁	
	請將產品儲存在規範溫度和濕度環境,勿將產品直接曝曬在陽光下或堆	
T. 1.		
Unpacking	(1) Check for the correct vertical direction of the package before unpacking.	
拆卸	拆包裝之前先確認包裝的拆封方向。	
Handling	(1) Clean finger sacks or gloves and mask are required during handling to prevent	
拿取	finger-prints or stain on the products and damages to the products caused by	
J-10	sharp edges.	
	拿取時請將手清洗乾淨、帶手套和口罩,以免手指紋和異物髒污到產品。	
	(2) Do not handle the viewing area of the panel.	
	拿取時勿觸可視區。	
	(3) Do not handle the panel at the tail (connector) to prevent detachment of the tail	
	to the panel.	
	勿從排線拉起,以発排線受損。	
Cleaning	(1) Clean soft clothes with neutral detergent or ethanol may be used for cleaning °	
清潔	使用乾淨的軟布沾上酒精或天然清潔劑清潔產品。	
	(2) Do not use any chemical solvent, acidic or alkali solution.	
	勿用化學藥劑或酸性或鹼性溶劑。	
	(3) Do not allow liquid from soaking into the joint of film and glass that may result	
	in peeling or malfunctioning.	
	勿將不明液體浸泡在下不層之間的接縫,以免上層薄膜剝落或故障。	
Installation	(1) Excessive force or strain to the panel or the tail is prohibited.	
組裝	禁止在面板和排線上施加壓力。	
	(2) The panel is designed with air groove. Insulation and cushioning pads should be	
	designed around the edges of the panel to prevent liquid penetration or dust	
	gathering.	
	本產品有通氣孔設計,機構設計時在產品的邊緣安排絕緣和緩衝墊,以到	
	液體滲透或灰塵進入。	
	*Please take attention seriously on 6, 7 and 8 of items11, Installar	
	Guide on Page 9.	
	*: 請特別注意第 9 頁,第 11 項的 6、7 和 8。	
Operating	(1) Operate with a stylus (tip R0.8 or over), or with a finger without applying	
操作	excessive load. Sharp edged or hard articles are prohibited.	
採作	使用 R0.8 觸控筆或手指操作。避免尖銳物觸碰面板表面。	
	(2) The gathering of dew in the panel may occur with abrupt temperature or	
	humidity changes. A stable environment condition is recommended.	
	溫度和濕度突變的情況下,表面會產生霧氣. 建議在穩定的環境下使用。	
Others	(1) Keep the surface clean. No adhesives should be applied.	
其他	表面不可塗抹粘著劑並保持清潔。	
7516	(2) Avoid high voltage and static charge.	
	避免高壓和靜電。	
	(3) Liyitec reserves the right to substitute materials with the same grade and	
	specification. 木公司保有同组核的材料機再權利。	
	本公司保有同規格的材料變更權利。	

#### 14. Appearance Specifications

外觀檢驗規範

Defect Name	Criteria	Judgment
缺陷	規範	判定
Particle	D≦0.25	OK
異物	$0.25 < D \le 0.4$	Each Area <sup>(3)</sup> ≦2, Total≦5, OK 每區 <sup>(3)</sup> ≦2, 共≦5, OK
	D>0.4	NG
Blur Stain and	D≦0.25	OK
Interference Pattern	$0.25 < D \le 0.4$	Each Area <sup>(3)</sup> ≤2, Total ≤5, OK
髒污和異紋	D>0.4	NG
Linear Object	$W \leq 0.05$ and $L \leq 12$	OK
外來線狀物	$0.05 < W \le 0.1$ and $L \le 12$	Total ≤ 3, follow Condition 1, OK
	W > 0.1 and $L > 12$	NG
Scratch	$W \leq 0.05$ and $L \leq 12$	OK
刮傷	$0.05 < W \le 0.1$ and $L \le 12$	Total≨5, follow Condition 1, OK
	W > 0.1 and $L > 12$	NG4
Damage to Glass	$X \le 2, Y \le 2, Z \le T$	Total≦2, OK
玻璃的裂傷	Please refer to the figures in page 8	Damages with possible worsening are not
A: corner flaw 角裂傷		allowed.
B: Edge flaw 邊緣裂傷		不允許有可能會繼續裂的裂痕.

**Condition 1**: Distance between defects should not be less than 20mm.

條件(一): 兩個不良處之間的距離要 20mm 以上。

Note 1: Particle, Stain or Linear Object that can be clean out easily within 3 times is disregarded.

註(一):異物、髒污、條狀物正常擦拭3次可去除,即可允收。

Note 2: All dimensions are in mm unless otherwise specified. 註

(二):尺寸單位爲 mm, 除非另有標示。

Item	Name of Defect	Definition
1	Dimension 尺寸	D: Average Diameter; W: Width; L: Length; T: Glass Thickness; D: 平均直徑; W: 寬度; L: 長度; T: 玻璃厚度
2	Inspection Area 檢驗區	According to engineering drawing, Viewable Area is the Inspection Area. Any defect outside of the Viewable Area may be disregarded. 依工程圖的可視區爲檢驗區域.可視區以外的不良可忽略。
3	Each Area One of the areas of T/P Viewable Area divided into 9 (3 by 3) equal areas 每區 將觸控螢幕平均分割爲3x3的9個區域,每區爲其中一個區域。	
4	Stain 髒污	No clear outline, not easy to identify with eyes, but able to clean out by wiping. 輪廓不清晰,以肉眼辨識不易的沾污或與觸控面板表面有明顯色差,存在於觸控面板表面,可擦拭乾淨。
5	Interference Pattern 異紋	No clear outline, not easy to identify with eyes and unable to clean out by wiping. 輪廓不清晰,以肉眼辨識不易的沾污或與觸控面板表面有明顯色差, 存在於 薄 膜與玻璃內部, 無法擦拭乾淨。

#### 15. Durability Testing Method


耐久測試方式

1. Finger Touch: 打點測試方式:

③ Test Position: Center of Active Area. (Fig. 1) 測試位置: 動作區的中心點。(圖. 1)

Test pen: R8.0 Silicon Rubber Hs50~60°. (Fig 2)
 測試筆: R8 橡膠頭 Hs50~60°(圖.2)


Test method: Knock at the single point測試方式: 打在同一個點。

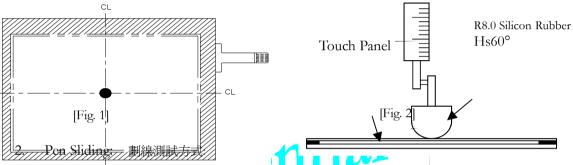

Test Position: Center in Active Area 40mm×40mm (Fig 3) 測試位置: 動作區的中心 40mm×40mm (圖.3)

Test Pen R0.8 polyacetal Stylus. (Fig .4)
 測試筆: R0.8 塑膠筆。(圖.4)

Test Method: Write in active area.測試方式: 寫在動作區。

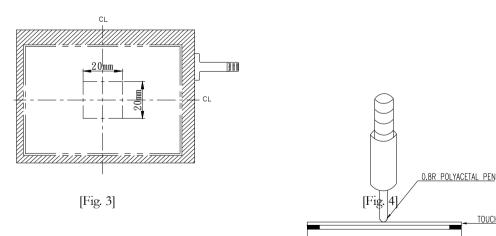



TOUCH PANEL

#### 16. Cautions for Product Handling

Note: To prevent malfunction as a result of improper handling of touch panel product, please make sure that the following instructions are followed:


- 1 Wear gloves at all time upon handling touch panel, and hold touch panel only at the edge of the panel.
- 2 · Use only the standard polyacetal rod pen (with a radius of 0.8 at the end of the rod) for product testing. (Fig: 1,2,3)

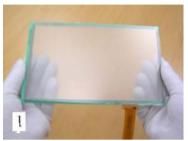

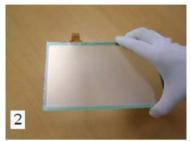



- 3 Do not lift touch panel via the connector (Tail). [Excess force applied on the Tail may cause displacement of the connector or cracks at the base of the panel.] (Fig: 4,5,6)
- 4 Do not handle the touch panel via the surface of the panel. [Excess force applied on the touch panel may crack the glass layer of the touch panel.] (Fig: 7,8)
- 5 Do not pile up touch panels together or place heavy substance on the touch panel. [Excess stress on the touch panel may scratch the surface of the touch panel, or crack the touch panel.] (Fig:9,10)
- 6 Do not touch the surface of the touch panel via sharp objects. [Sharp objects may cause scratch on the surface of the touch panel.] (Fig. 11)
- 7 Do not place the face of the film on the table or any other surface. [Various objects on the table may scratch the surface of the touch panel.] (Fig: 12)

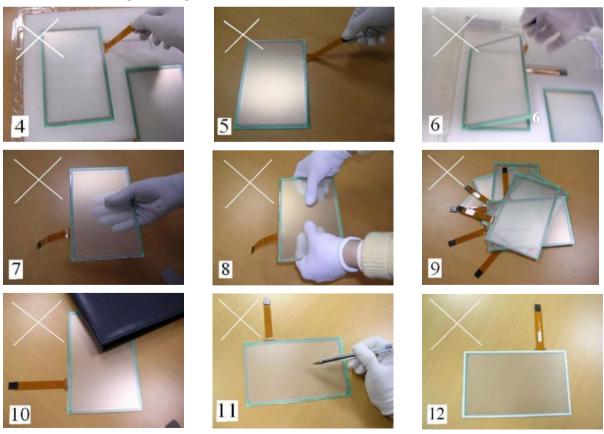

### 17.Packing Method

